


FLOOR STAND, Model 80121

assembly instruction / Montageanleitung /
instruction de montage / istruzione d'assemblaggio



1.




Screw together the two floorstand posts until tightly secured

2.




Place the assembled pole into the base of the stand with the mounting plate facing forward.

3.

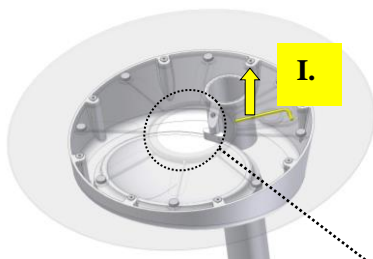

Turn the floorstand upside-down and use an Allen wrench to tighten the screw which will secure the post in place.




The Allen wrench is located under the base of the floorstand

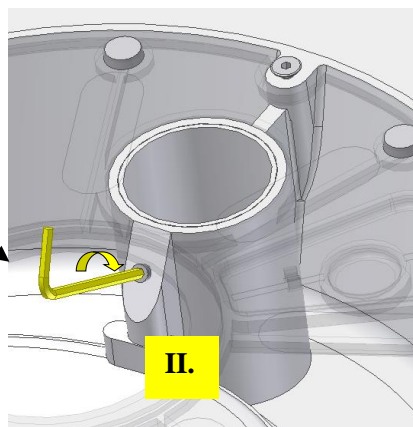

(4.)





optional / Optional / facultative / facultativo:

fill with sand / mit Sand füllen / remplir avec le sable / riempire con sabbia

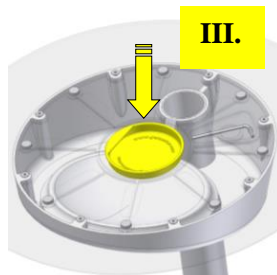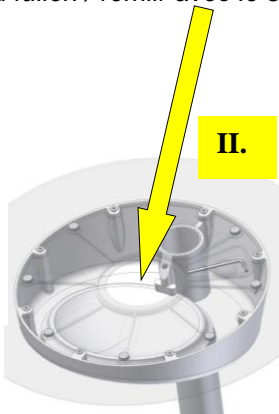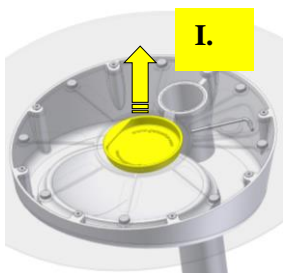

(Optional) Fill the base of the floorstand with sand to increase stability

5.

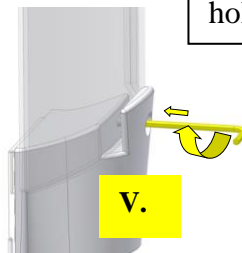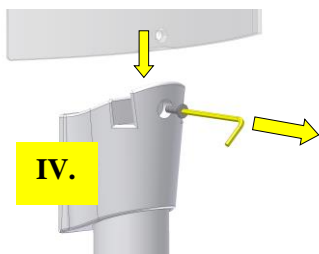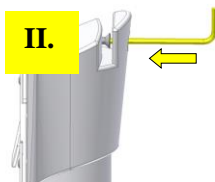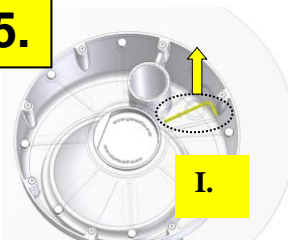

Installing the floorstand sign holder

6.

Installing the Drip tray to the floorstand *(Skip this step if you do not have a drip tray)*


1. Use a screwdriver to remove the mounting plate attached to the front of the floorstand.
2. Mount the drip tray to the front of the floorstand using the screws from the floorstand.
 - a. It is important that you use the original screws from the floorstand when mounting the drip tray.
3. Mount the dispenser normally using the drip tray as the new mounting plate.



7.

Installing the Dispenser to the Floorstand


1. Remove the mounting plate from the back of the dispenser
 - a. Gently pull the mounting plate tab away from the dispenser and pull down on the mounting plate to remove it
2. Slide the dispenser onto the mounting plate that is attached to the floorstand. Press down until the dispenser snaps into place.
 - a. If the dispenser is hard to press down, make sure that the grooves of the dispenser are properly aligned with the grooves of the mounting plate

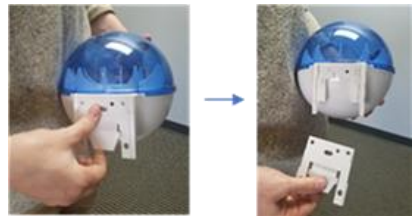

**TECHNICAL SPECIFICATIONS / TECHNISCHE SPEZIFIKATIONEN /
SPÉCIFICATIONS TECHNIQUES / SPECIFICA TECHNICA :**

material / Material / materiel / materiale:..... ALU & ABS
weight / Gewicht / poids / peso:..... 3.2kg (7 lb)
weight* / Gewicht* / poids* / peso*:..... 7.3kg (16 lb)

* with sand / mit Sand / avec sable / con sabbia

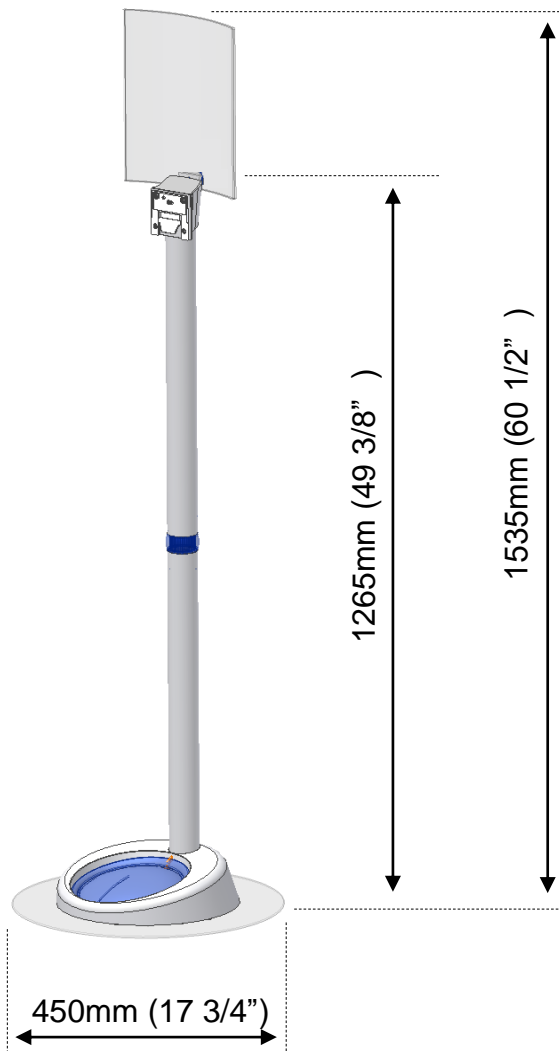

Headquarter / Hauptquartier /
Siège / quartier generale:

Local distributor / Distributor /
Distributeur / distributore:

soaptronic®, LLC
20562 Crescent Bay Dr.
Lake Forest, CA 92630, USA

Toll Free 1 800 327 2606
Tel. ++1 949 465 8955
Fax. ++1 949 465 8962